



Cat. No. 60-2763

RC Play Buggy

Your RC (radio-controlled) Play Buggy is fun for children ages four and up. You can watch it race forward or spin in circles. Its gear shift and horn sound just like a real car!

INSTALLING THE BATTERIES

Your buggy requires four AA batteries, and its controller requires one 9V battery (neither supplied). For the best performance and longest life, we recommend RadioShack alkaline batteries.

Warning: Dispose of batteries promptly and properly; do not bury or burn them.

Cautions:

 
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the buggy for several days, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

To install the batteries:


1. Use a Phillips screwdriver to remove the screws on the buggy's and controller's battery compart-

ment covers, then remove the covers.

2. Install four AA batteries into the buggy's battery compartment,



 and a 9V battery into the controller's battery compartment and on top of the attached ribbon, as indicated by the polarity symbols (+ and -) marked inside the compartments.




3. Replace the covers.

When the RC Play Buggy moves slowly or not at all, replace the batteries in both the controller and the buggy.

OPERATION

Warning: Never play with your RC Play Buggy in the street.

 1. Set the buggy's key to **ON**, then place the buggy on the floor.

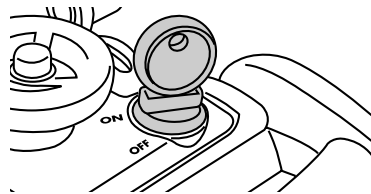


2. Hold down the controller's power knob. The buggy drives forward.

Release the power knob to stop the buggy.


Hold the power knob again to make the buggy spin in circles.

Note: Your RC Play Buggy stops when it runs into anything, but the motor keeps running. When this happens, hold down or release the controller's power knob so the Play Buggy changes direction, or move the Play Buggy by hand.

 3. Pull the gear shift to hear the buggy's motor sound like it's accelerating.

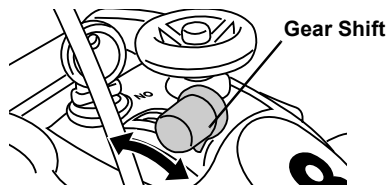

Press the horn to hear the buggy honk.

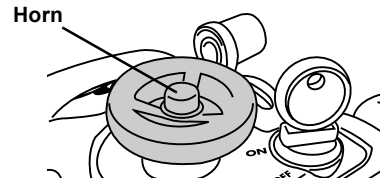 

4. Set the key to **OFF** to turn off the buggy.

CARE

To enjoy your RC Play Buggy a long time, keep the buggy out of dirt and water.

Do not drive the buggy on carpet, and clean the buggy with a damp cloth to keep it looking new.

Modifying or tampering with the buggy's internal components can cause a malfunction and invalidate its warranty. If your buggy is not performing as it should, take it to your local RadioShack store for assistance.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

04/99